


Step 1.

Position gauge onto blanket cylinder bearer as shown and rock gently to seat body parallel to cylinder. Zero dial indicator by turning bezel on the indicator.

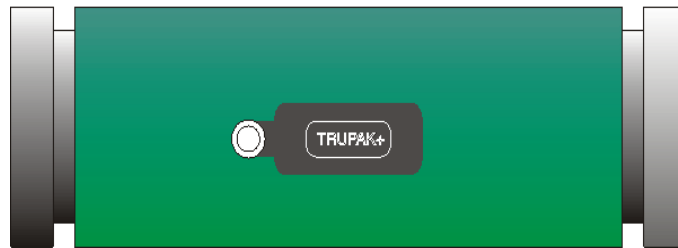

Step 2.

Move gauge to center of blanket and again rock gently to seat body to cylinder. Read height of blanket above or below bearer directly.

